

SEKOL

Lead the World...

G L O S S Y
COLLECTIONS

| C O N | C

H M E

S P A C E

2023-2024

1200
X1800 MM



GLOSSY COLLECTIONS

Floors and walls draw inspiration from the most precious marble, specially selected to give an exclusive look to contemporary spaces. Aesthetics and technology blend in tiles, where the beauty of marble, the noble stone par excellence, gains innovative textures and decorations.

BAND OF COLOURS



The colours in the collection are warm, welcoming and of mild shades. They are contemporary and chic those are well-suited to any space they will be equipped in.



GLOSSY

Combining minimalism
with hints of the modernist

Beauty lies

1200X1800
MM

WHEN CREATIVITY MEETS PERFORMANCE




Planning




Analysing




Creating

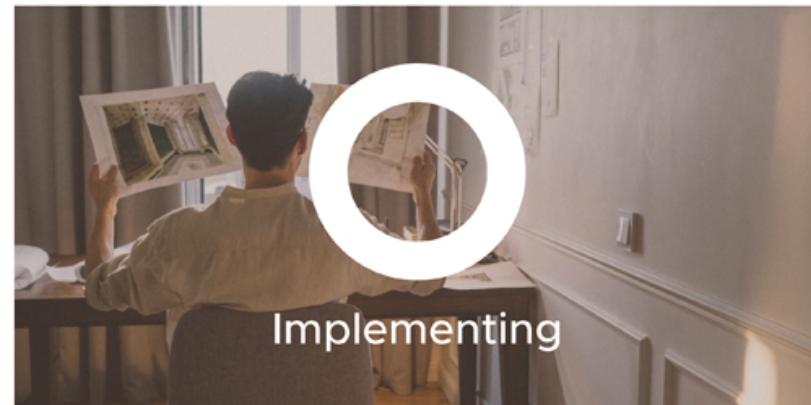

Implementing

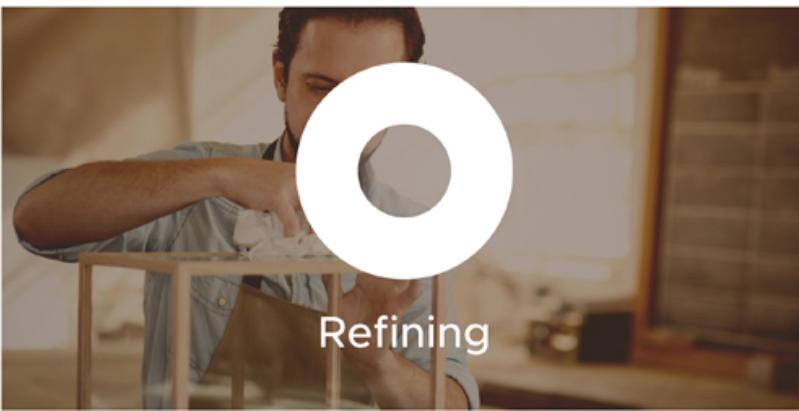

Refining

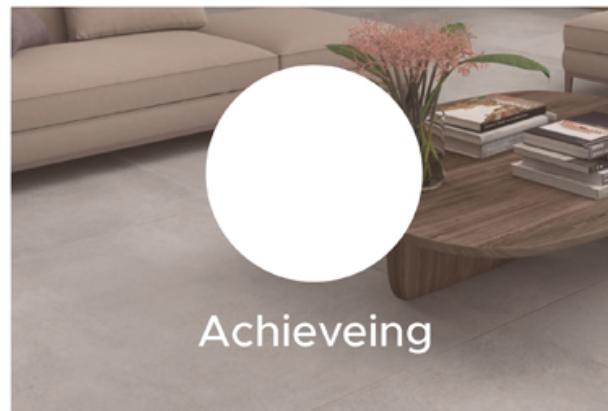

Achieving

Perfect
synthesis
of
visionary
design
and
technological
performance

MULTI PURPOSE

Easily set

APPLICATION SURFACE



INDEX OF CONTENT



ELYSIUM
GREY



BRECCIA
SILVER



EMIL
THUNDER



BOTTOCHINO
FLORITO



BRECCIA
SIMLESS



ALEXA
GRAY



ONYX
LIGHT



AZURO
RIVER



OTHELLO
BEIGE



GOLDWIN
COSTA



METAL
MAGIC



SATVARIO
CROWN



SYDNEY
WHITE



TORCYANO
(BOOKMATCH)



LYCOS
BEIGE



ONYX
GRAY



BELGIUM
BOTTOCHINO



CRAZY
CARARA



GALAXY
GRAY



ALEXA
CREMA



ANTIQUE
BEIGE



ANTIQUE
GREY



ARMANI
UMBER



BOSCO
GRAY



BRECCIA
EVA



BRECCIA
MARINO



COCO
MARFIL



ELEGANCE
BROWN



ELYSIUM
LUX



ELYSIUM
WHITE



EMILE
CREMA



FUSION
BLUE



IRIS
BEIGE



KATNI
BEIGE



MIAMI
BEIGE



MOULDY
ONYX



PIETRA
ABLONE



PIETRA
BEIGE



ROCCELA



SCREPLATO
NEO



ULTRA
SATVARIO



VOLGA
CARRARA





Elysium Grey

Size 1200X1800 MM

Thickness 9 MM

Random 03



Flexible Body





Breccia Silver

Size 1200X1800 MM

Thickness 9 MM

Random 03



Flexible Body





Emil Thunder

Size 1200X1800 MM

Thickness 9 MM

Random 03



Flexible Body





Bottochino Florito

Size 1200X1800 MM

Thickness 9 MM

Random 03



Flexible Body





Breccia Simless

Size 1200X1800 MM

Thickness 9 MM

Random 03



Flexible Body





Alexa Gray

Size 1200X1800 MM

Thickness 9 MM

Random 03



Flexible Body





Onyx Light

Size 1200X1800 MM


Thickness 9 MM

Random 03



Flexible Body



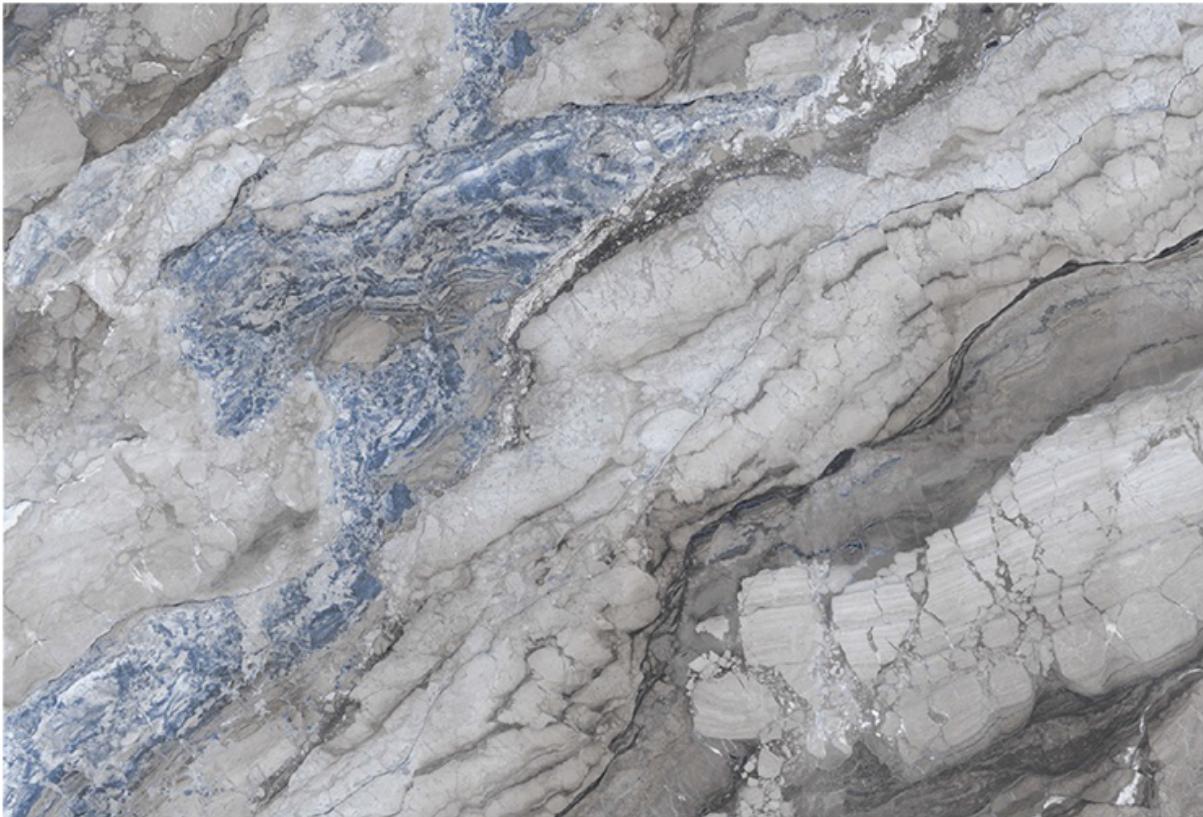

Azuro River *

Size 1200X1800 MM

Thickness 9 MM

Random 02



Flexible Body





Othello Beige

Size 1200X1800 MM

Thickness 9 MM

Random 03



Flexible Body





Goldwin Costa

Size 1200X1800 MM

Thickness 9 MM

Random 03



Flexible Body





Metal Magic *

Size 1200X1800 MM

Thickness 9 MM

Random 03



Flexible Body



SATVARIO CROWN




Satvario Crown

Size 1200X1800 MM
Thickness 9 MM
Random 03



Flexible Body



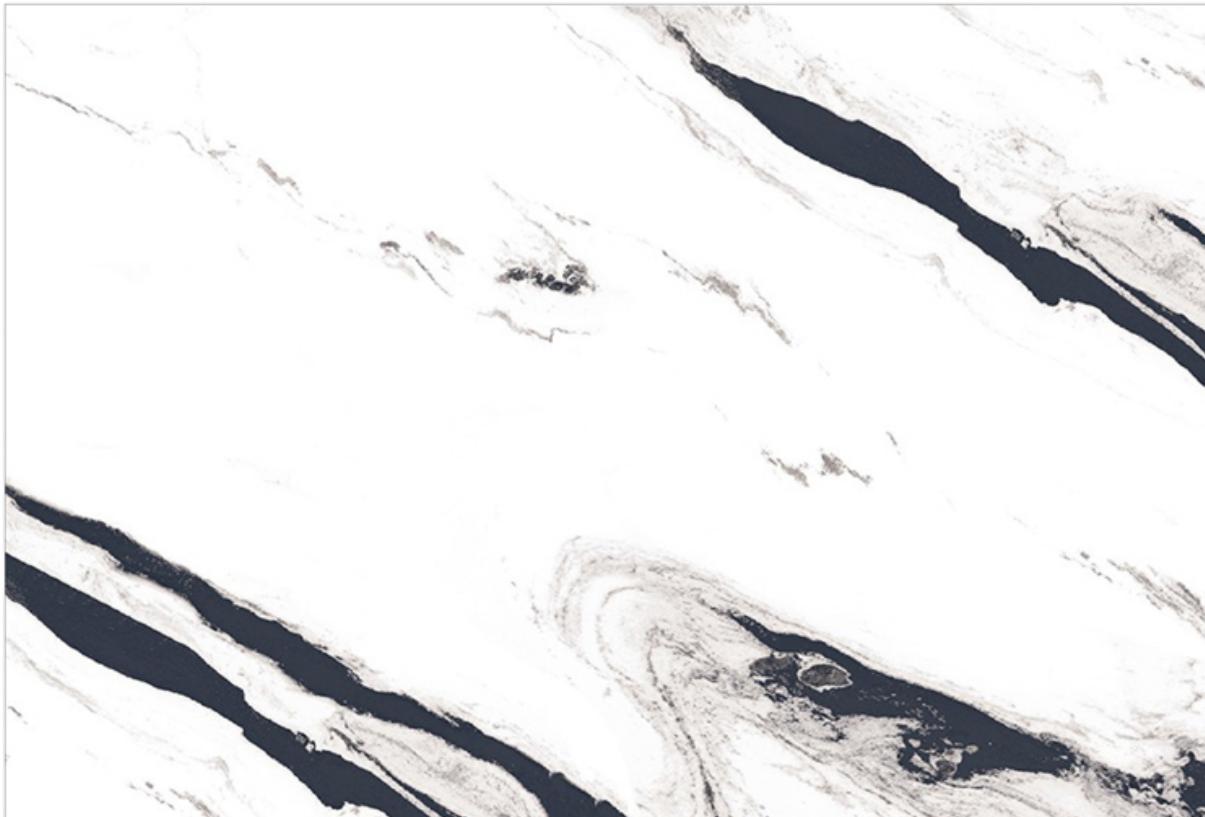


Sydney White

Size 1200X1800 MM


Thickness 9 MM

Random 03

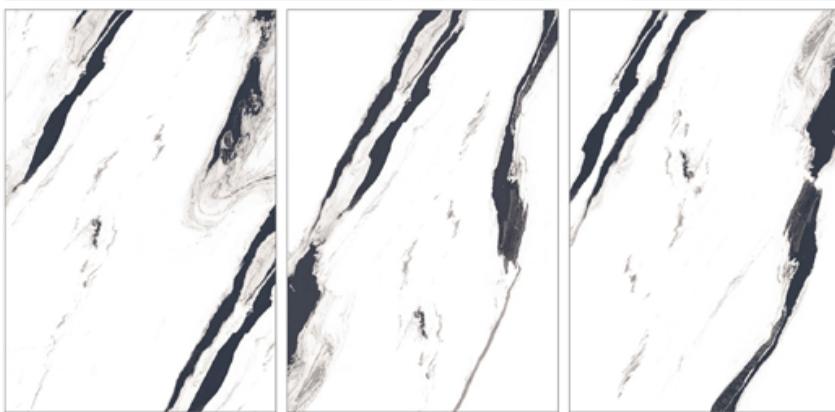

Flexible Body



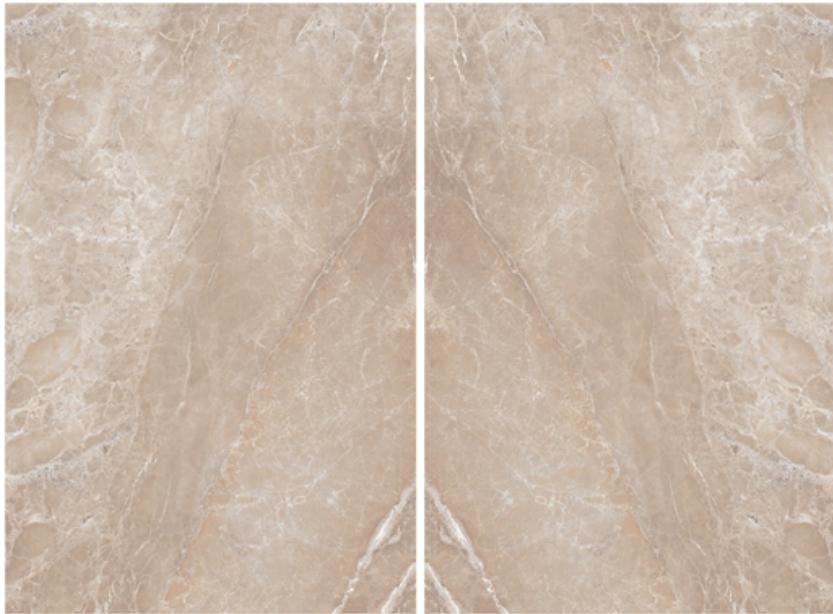

Torcylando

Size 1200X1800 MM
Thickness 9 MM
Random 03



Bookmatch



Flexible Body





Lycos Beige

Size 1200X1800 MM

Thickness 9 MM

Random 03



Flexible Body





Onyx Gray

Size 1200X1800 MM

Thickness 9 MM

Random 03



Flexible Body



RECEPTION





Belgium Bottocchino

Size 1200X1800 MM

Thickness 9 MM

Random 03



Flexible Body





Crazy Carara

Size 1200X1800 MM

Thickness 9 MM

Random 03



Flexible Body

Hurricane
Harry's
Bar

BAR

*Bar -
Svijetla
Hrvatska*



Galaxy Gray

Size 1200X1800 MM

Thickness 9 MM

Random 03



Flexible Body





Alexa Crema

Size 1200X1800 MM

Thickness 9 MM

Random 03



Flexible Body





Antique Beige

Size 1200X1800 MM

Thickness 9 MM

Random 03



Flexible Body





Antique Grey

Size 1200X1800 MM


Thickness 9 MM

Random 03



Flexible Body



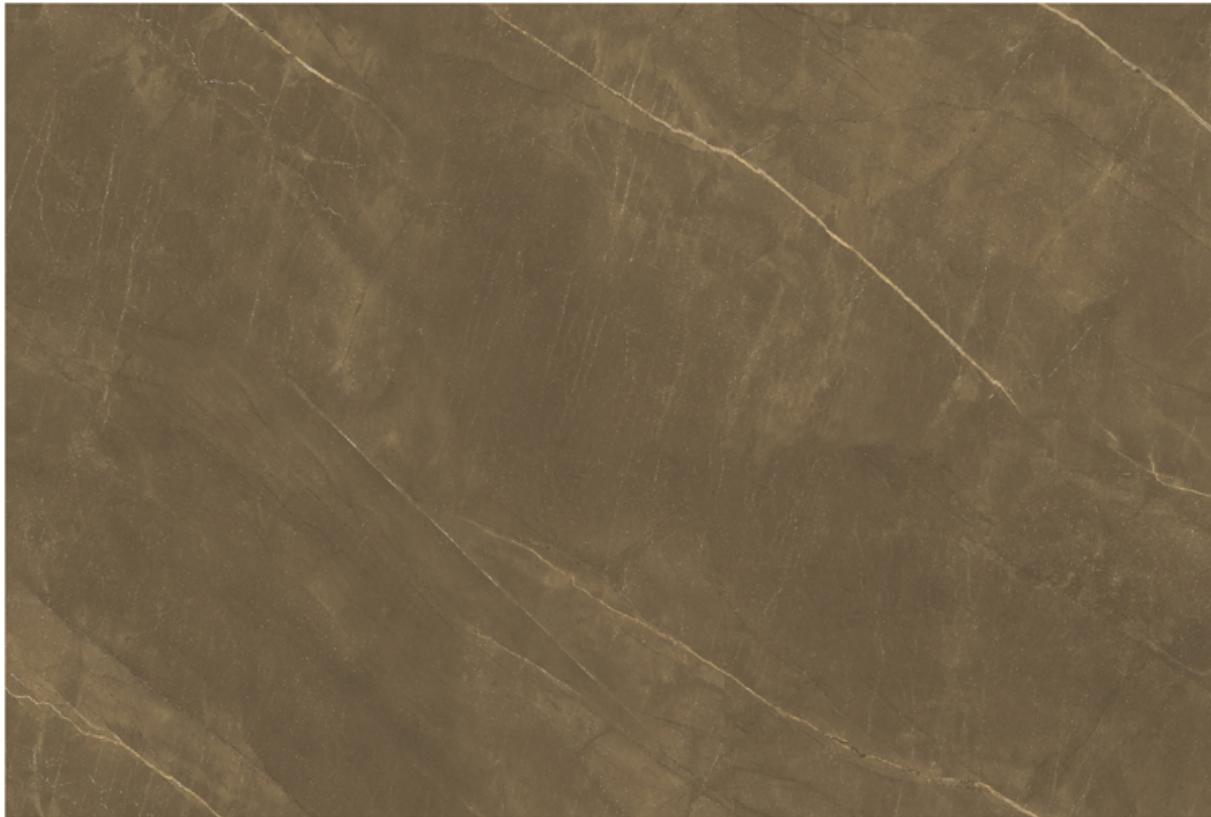

Armani Umber *

Size 1200X1800 MM

Thickness 9 MM

Random 02



Flexible Body





Bosco Gray

Size 1200X1800 MM


Thickness 9 MM

Random 03



Flexible Body



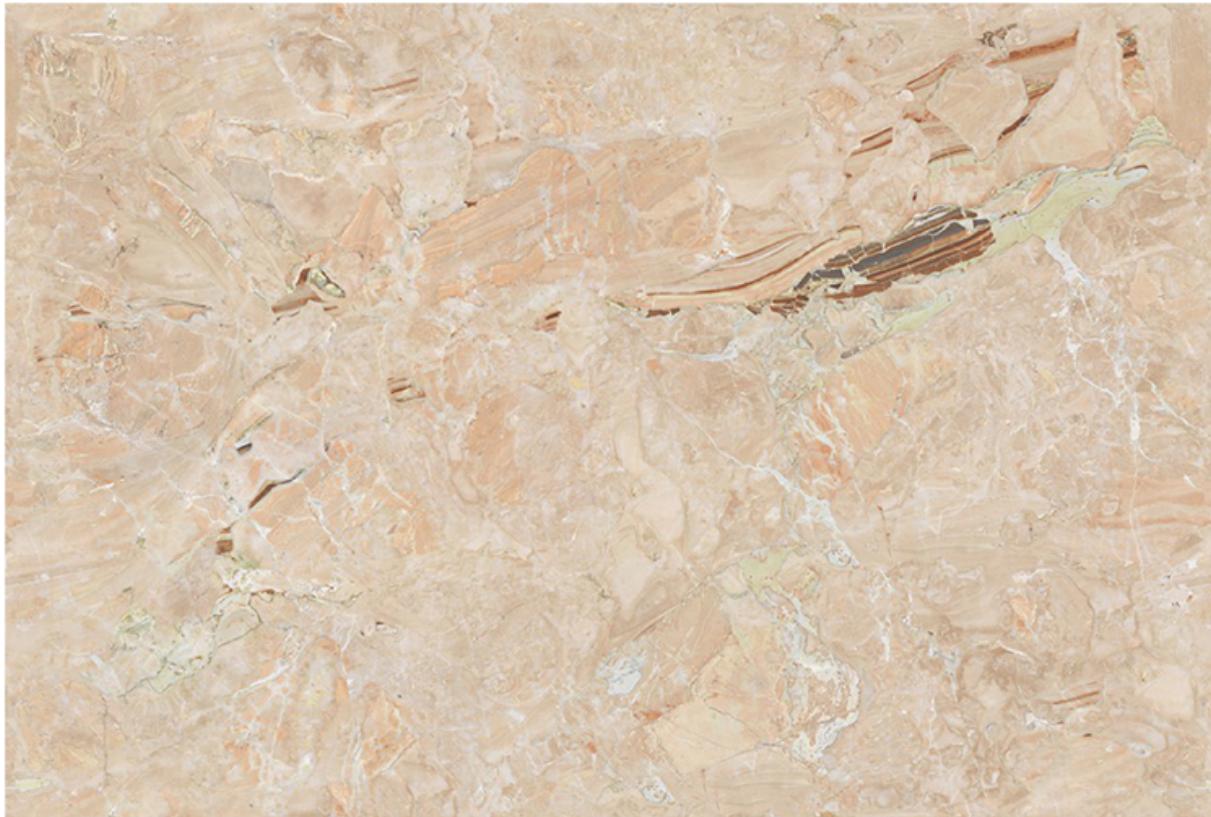

Breccia Eva

Size 1200X1800 MM

Thickness 9 MM

Random 02



Flexible Body





Breccia Marino

Size 1200X1800 MM

Thickness 9 MM

Random 03



Flexible Body

Departures

- ↓  Gate A01 to A10
- ↓  Gate B11 to C20
- ↓  Gate C20 to C30





Coco Marfil

Size 1200X1800 MM


Thickness 9 MM

Random 03



Flexible Body



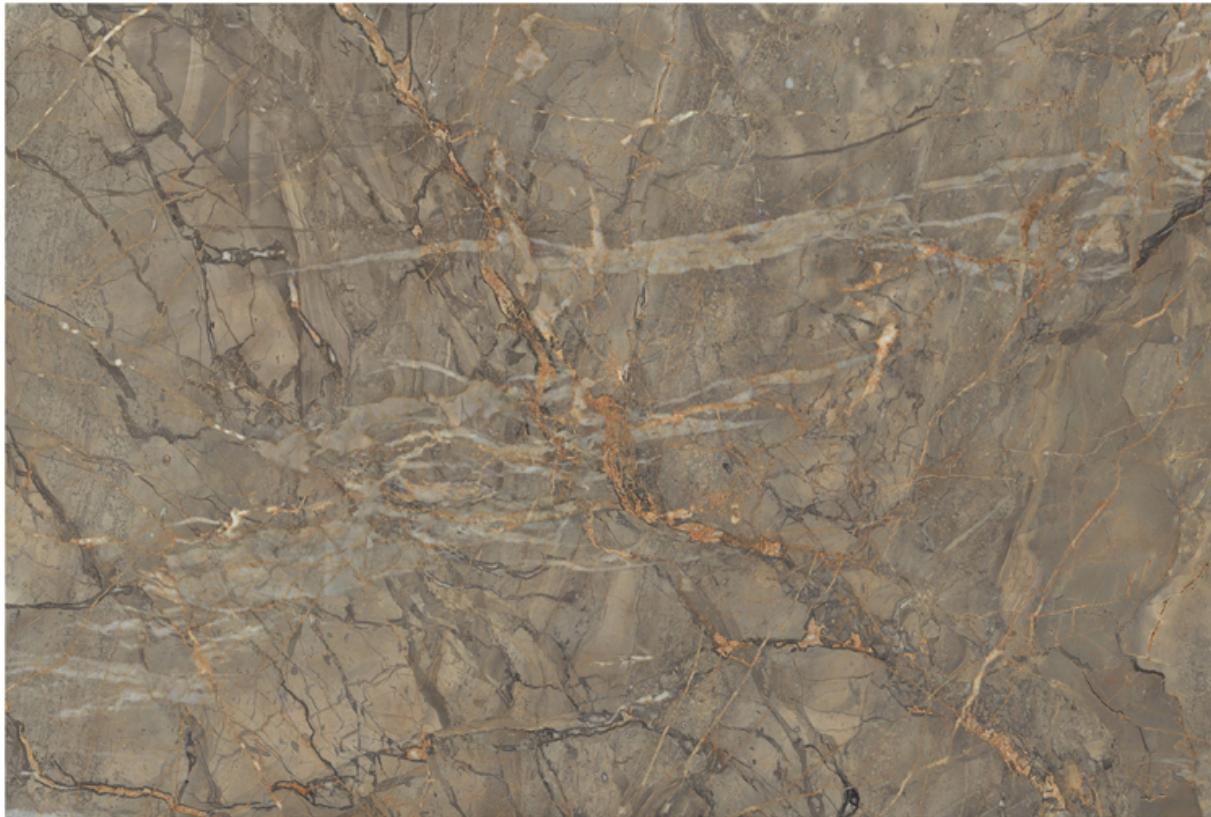

Elegance Brown *

Size 1200X1800 MM

Thickness 9 MM

Random 02



Flexible Body





Elysium Lux

Size 1200X1800 MM

Thickness 9 MM

Random 03



Flexible Body





Elysium White

Size 1200X1800 MM

Thickness 9 MM

Random 03



Flexible Body





Emile Crema

Size 1200X1800 MM


Thickness 9 MM

Random 03



Flexible Body



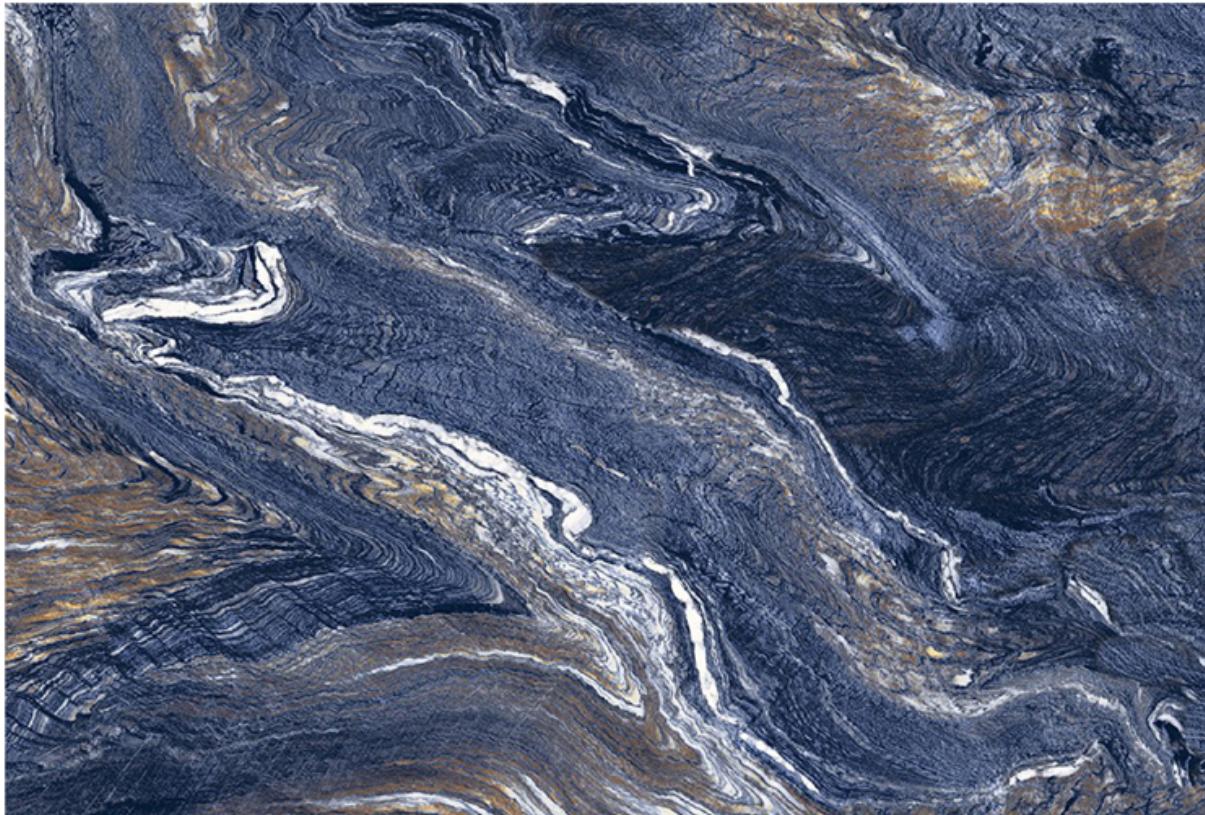


Fusion Blue *

Size 1200X1800 MM

Thickness 9 MM

Random 03

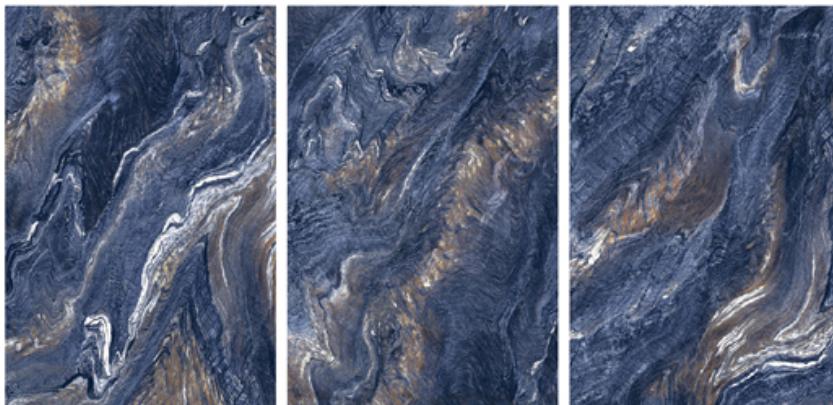

Flexible Body





Iris Beige

Size 1200X1800 MM

Thickness 9 MM

Random 03



Flexible Body





Katni Beige

Size 1200X1800 MM

Thickness 9 MM

Random 03



Flexible Body





Miami Beige

Size 1200X1800 MM

Thickness 9 MM

Random 03



Flexible Body





Mouldy Onyx

Size 1200X1800 MM

Thickness 9 MM

Random 03



Flexible Body





Pietra Ablone

Size 1200X1800 MM

Thickness 9 MM

Random 03



Flexible Body





Pietra Beige

Size 1200X1800 MM

Thickness 9 MM

Random 03



Flexible Body





Roccela

Size 1200X1800 MM


Thickness 9 MM

Random 03



Flexible Body



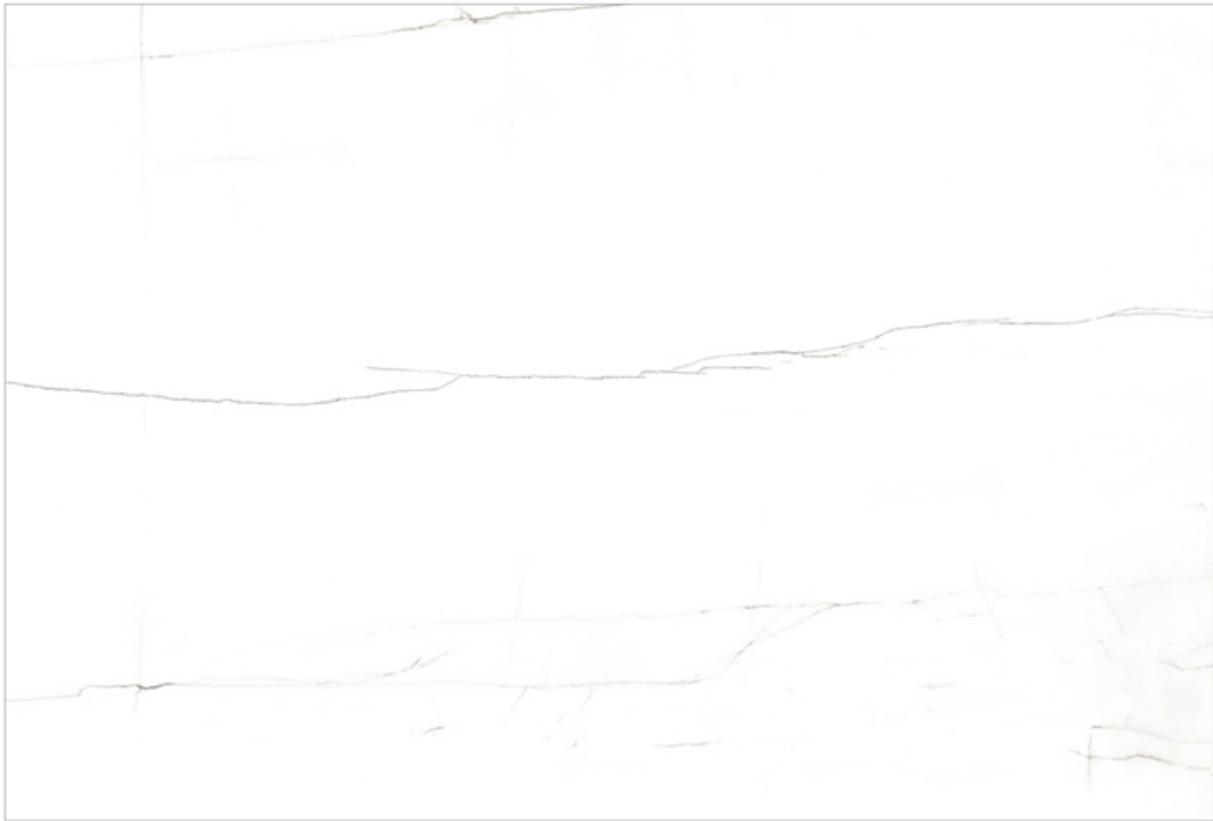

Screplato Neo

Size 1200X1800 MM

Thickness 9 MM

Random 03



Flexible Body






Ultra Satvario

Size 1200X1800 MM
Thickness 9 MM
Random 03



Flexible Body



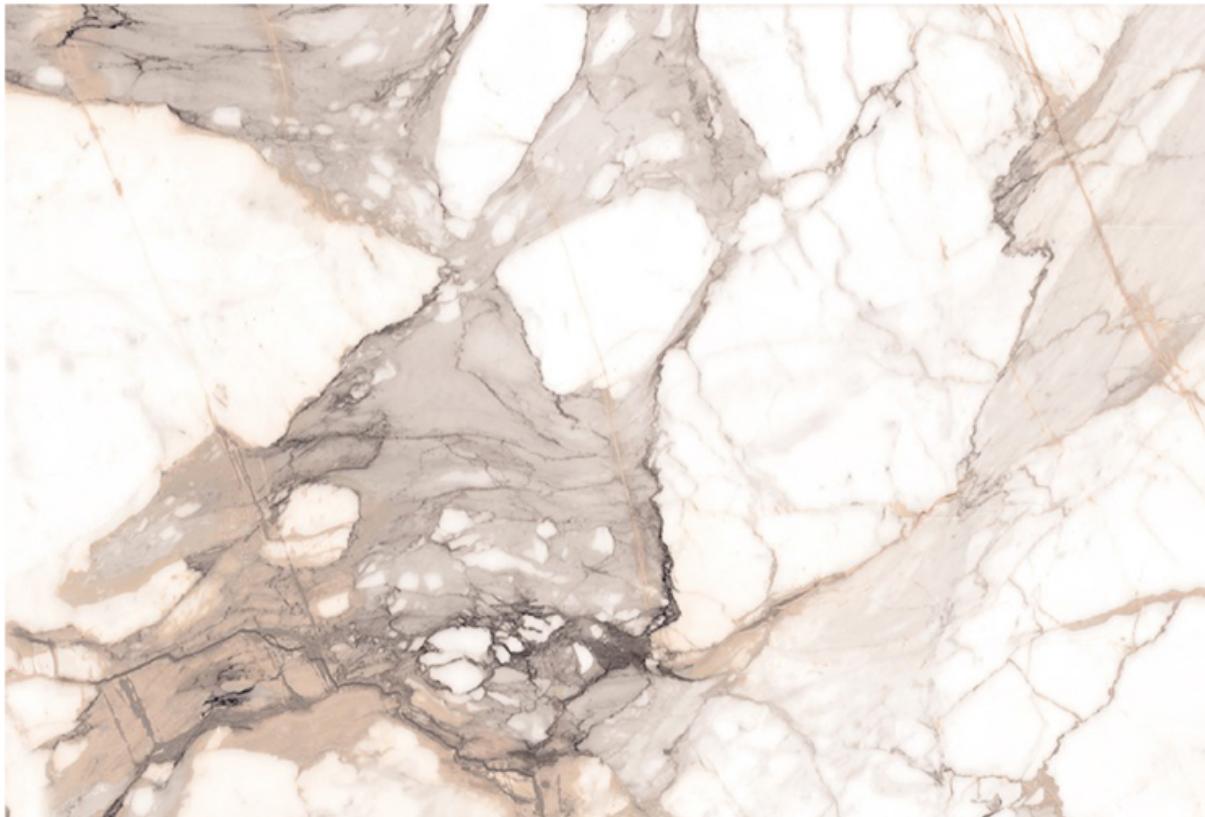


Volga Carrara

Size 1200X1800 MM


Thickness 9 MM

Random 03

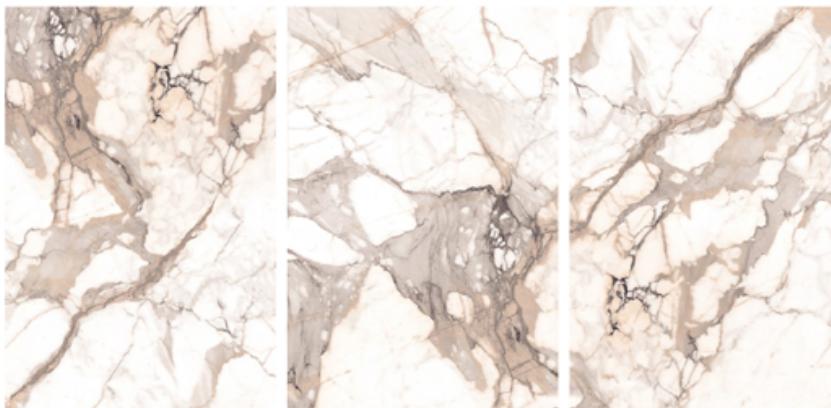

Flexible Body

THE MOVEMENT OF THE SLAB

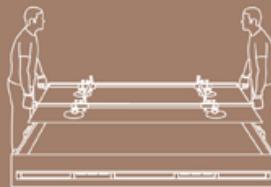

RAISING THE SLAB ON THE BENCH



✗ INCORRECT



✓ CORRECT

FIXING THE SLAB INTO THE WALL



✗ INCORRECT



✓ CORRECT



CUTTING WITH DIAMOND DISCS

Our products can be cut using diamond discs fitted onto the hand-held electrical grinding machine. The speed of Disc rotation must be high (>10000 RPM) and should have a low feed rate (< 1 m/min). It may be required to cool the disc with water. Recommended discs are the thin types generally used for cutting porcelain stoneware. The surface should be kept on a FLAT base while cutting without any gap underneath.



DRILLING

You can use cutting discs fitted to battery-operated screwdrivers or angle grinders, electrical drills as an alternative.



INTERNAL CUT / L-SHAPED CUT

To get internal and L-shaped corners & to reduce the risk of breakage, round off the vertex of the internal corner using bits with a radius of at least 5mm. Then cut with diamond discs, be cautious to stop moving the cutting tool forward. To drill and cut using diamond discs, follow the instructions provided above.



WHEN USING THESE TOOLS:

- Cool the point being drilled with water
- Don't put too much pressure and bear in mind the resistance of the type of laminated stoneware you are working on
- If you are using tungsten bits, start drilling at a low speed
- If you are using drills or screwdrivers, do not select hammering mode



EDGE-FINISHING



INSTRUCTIONS FOR MANUAL INSTALLATION

SINGLE LAYER METHOD



DOUBLE-LAYER METHOD



COMPRESSING THE TILE



IMPORTANT

All cutout corners must have a minimum diameter of 1/4". Never leave 90° angles. We recommend radii of more than 1/4" when the kitchen design allows as it makes the countertop firmer.



✓ CORRECT



✗ INCORRECT



✗ INCORRECT



✗ INCORRECT

CLEANING & MAINTENANCE

Our products are non porous (due to their high quality raw materials, stringent production parameters and state of the art technology), hence any dust or deposited waste cannot penetrate the surface.

For most cases only a damp cloth is sufficient for cleaning.

Regular cleaning highlights the aesthetic features of the surface and gives it exceptional shine.

For highly aggressive cleaning caused by some common food and substances follow the table below.

TYPE OF STAIN	CHEMICAL PRODUCT	EXAMPLE
Grease	Alkaline - Solvent	Detergent
Oil	Solvent	Ammonia, Baking Soda
Ink	Oxidant - Solvent	Alcohol, Liquid Bleach, Nail Paint Remover
Rust	Acid	Hydrochloric Acid, Vinegar, Red Harpic
Lime	Acid	Descaling Reagent, Hydro Chloric Acid
Cement	Acid	Hydro Chloric Acid
Wine	Alkaline	Ammonia, Liquid Bleach
Coffee	Alkaline - Solvent	Ammonia, Liquid Bleach
Rubber	Solvent	Alcohol, Thinner
Plaster	Acid	Hydro Chloric Acid
Candle Wax	Solvent	Alcohol, Thinner
Iodine	Oxidant	Liquid Bleach
Blood	Oxidant	Liquid Bleach
Ice Cream	Alkaline	Liquid Bleach

TECHNICAL SPECIFICATIONS

CHARACTERISTIC	STANDARD AS PER ISO-13006/2018 En14411 gr.bl.a	VALUE	TEST METHOD
Regulatory Properties			
Deviation in Length & Width	±0.5%	±0.2%	ISO 10545-2
Deviation in Thickness	±5%	±5%	ISO 10545-2
Straightness of Sides	±0.5%	±0.2%	ISO 10545-2
Rectangularity	±0.5%	±0.2%	ISO 10545-2
Surface Flatness	±0.5%	±0.3%	ISO 10545-2
Colour Difference	ΔE<1.00	ΔE<0.30	ISO 10545-16
Glossiness	As per Mfg.	As Per Mfg.	GlossMeter
Structural Properties			
Water Absorption	≤0.5 %	≤0.3 %	ISO 10545-3
Apparent Density	As Per Mfg.	>2.20 g/cc	ISO 10545-3
Massive Mechanical Properties			
Modulus of Rupture	Min 35N/mm ²	Min 40N/mm ²	ISO 10545-4
Breaking Strength	Min. 1300 N	Min. 2000 N	ISO 10545-4
Impact Resistance	As per Mfg.	Min. 0.55	ISO 10545-4
Surface Mechanical Properties			
Surface Abrasion Resistance	As per Mfg.	Min. class 3	ISO 10545-7
Moh's Hardness	As per Mfg.	Min. class 4	BS EN 15771
Thermo Hygrometric Properties			
Frost Resistance	As Per Mfg.	Frost Proof	ISO 10545-12
Thermal Shock Resistance	Min. 10 Cycle	Min. 10 Cycle	ISO 10545-9
Moisture Expansion	Max. 0.6mm/m	Max. 0.02mm/m	ISO 10545-10
Thermal Expansion	Max. 9.0 × 10 ⁻⁶	Max. 6.0 × 10 ⁻⁶	ISO 10545-8
Chemical Properties			
Chemical Resistance	As Per Mfg.	No Damage	ISO 10545-13
Stain Resistance	Resistant	Resistant	ISO 10545-14
Safety Properties			
Slip Resistance	As per Mfg.	N. A.	DIN 51130
Fire Resistance	As per Mfg.	Fire Proof	N. A.

PACKING DETAILS

Dimension (mm)	No. of PCs/Box	Square Feet	Weight (Approx)
1200x1800mm	2 Pcs.	46.5 Sq. Feet	90+ Kg.



Lead the World...



📍 8-A National Highway , Sartanpar Road,
Sartanpar, Behind Slim Tiles Pvt Ltd,
Morbi, Gujarat, 363642, India.

🌐 www.sekoltiles.com
✉ sekoltiles@gmail.com
+91 97264 18181
+91 97264 18189